

H5 LCD Calibration

1. Replace LCD.
2. Prepare SD Card & Create 2 folders in it. (See below)
 - A. `/mtd5/daincube/auto_start.sh + /mtd5/ts_calibrate`
 - B. `/touch_calibrate` (this folder is empty)
3. Insert SD Card into the pendant, Power On.
First reboot -> Start with UI.
Second reboot -> Run "ts_calibrate" automatically.
4. On ts_calibrate, touch 5 points
5. Take out SD Card, and reboot

