


TEACHING PENDANT FIRMWARE UPDATE MANUAL


EPIK / UNIK

1. Insert USB Drive into PC and Format it.

* File system must be FAT32

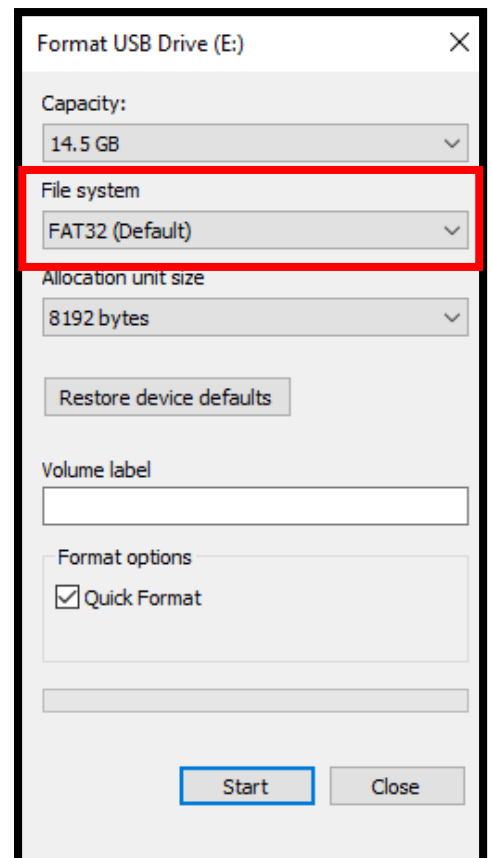


2. Copy and paste two files into USB Drive

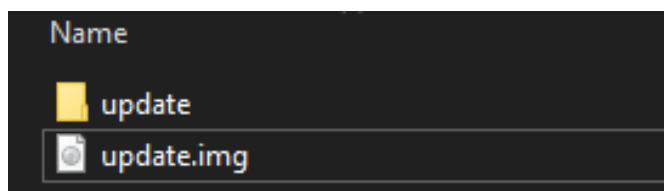


3. Connect USB Drive to the pendant,
And power on the robot.



4. Firmware will be upgraded automatically

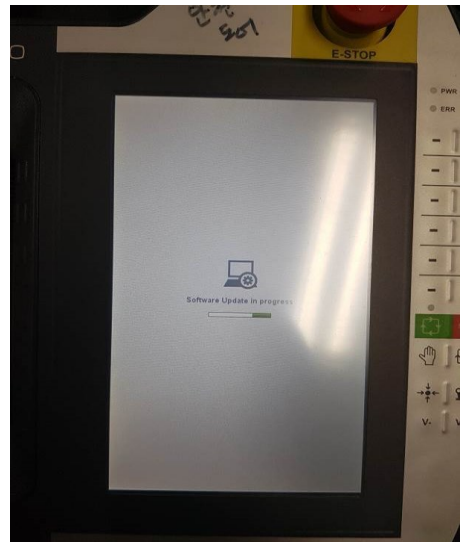


5. Firmware update finished.
Remove USB Drive and
press any key to reboot

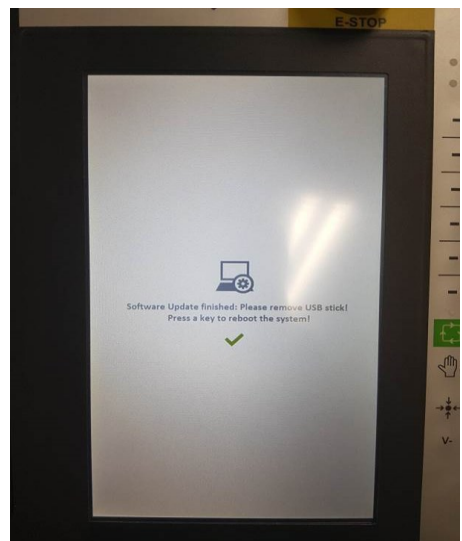

6. Screen Calibration


7. Reboot the robot again.

While rebooting, press MENU button to enter system configuration.

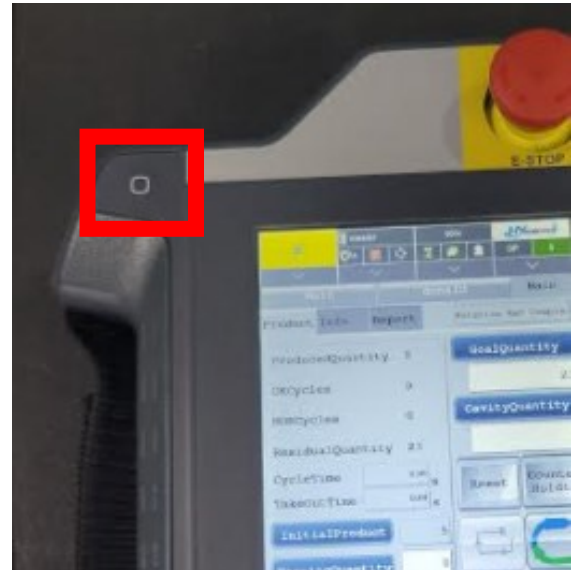


8. Enter Network Setting.


Set up IP address as below.

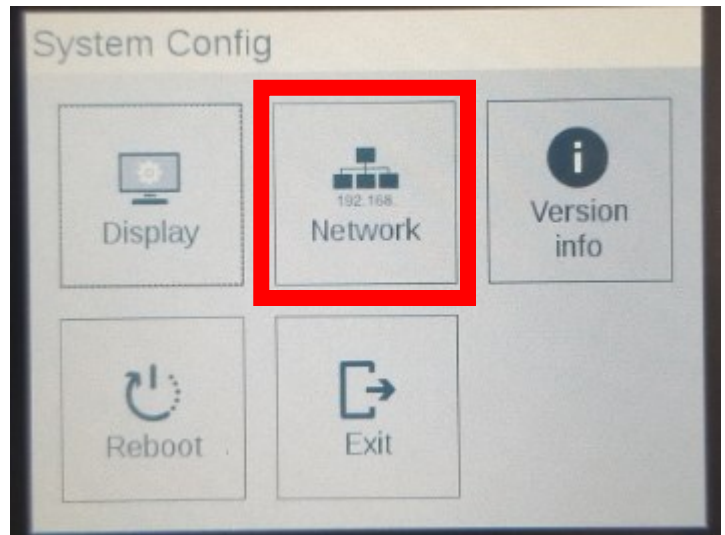

HOST IP

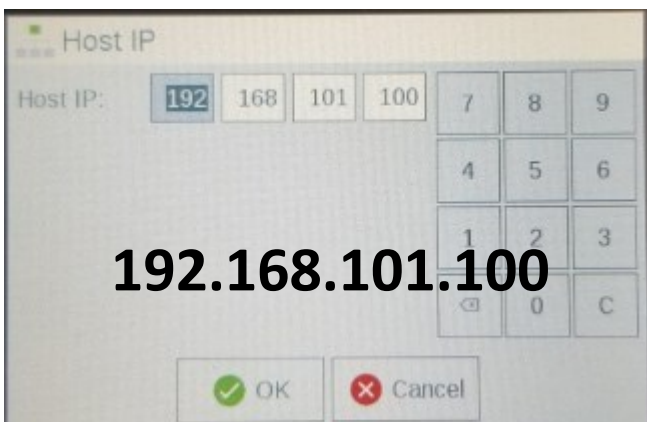

ETHERNET 0

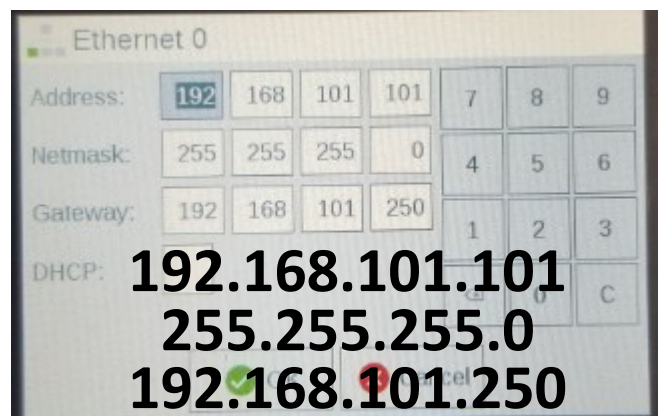

9. Reboot the robot.

Please let us know if you have any questions.

han@hyrobotics.com

