



# **USER LOG IN & LANGUAGE SETTING**

**EPIK / UNIK**

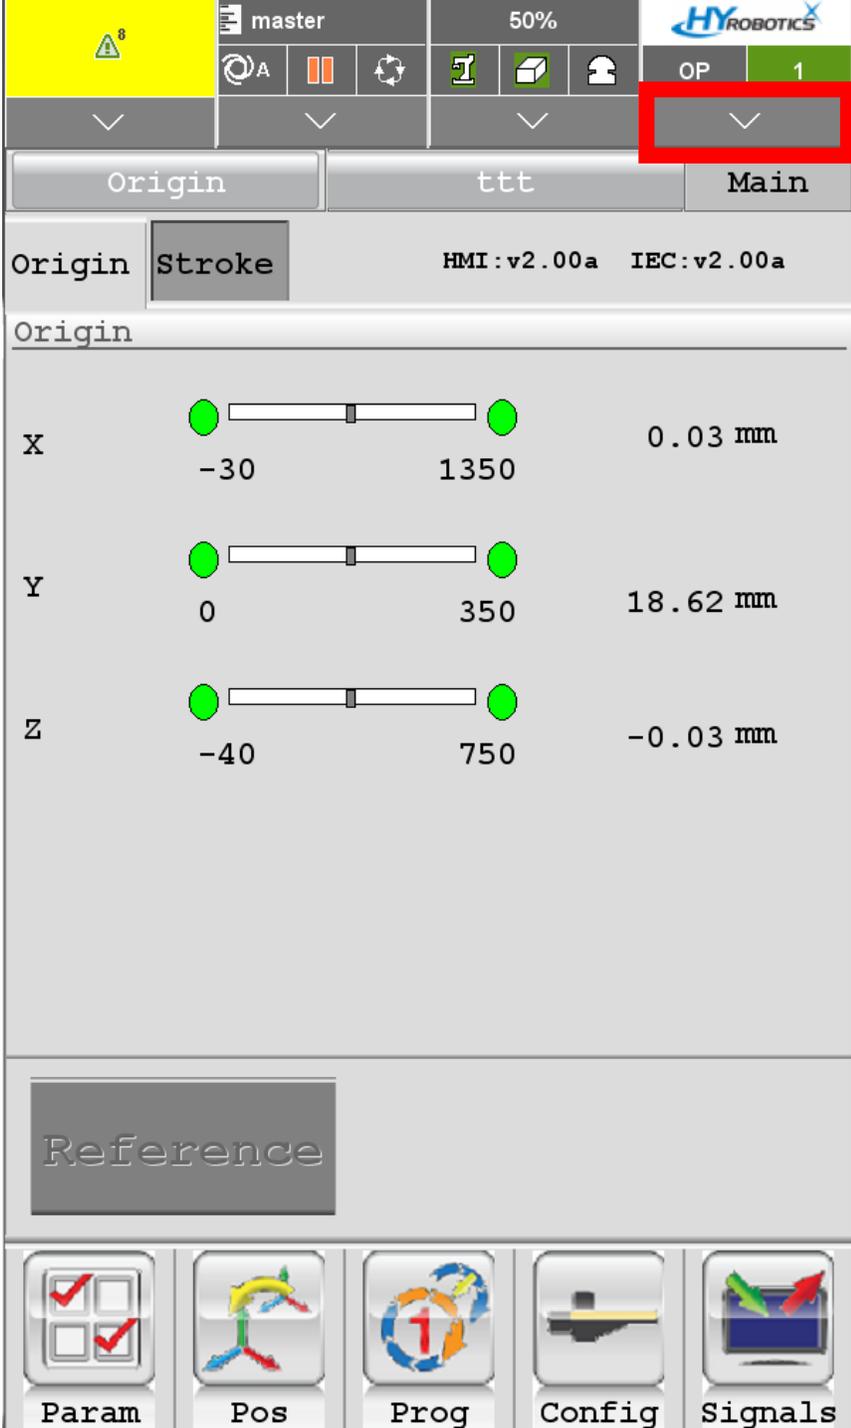

1

Press "Down Arrow"

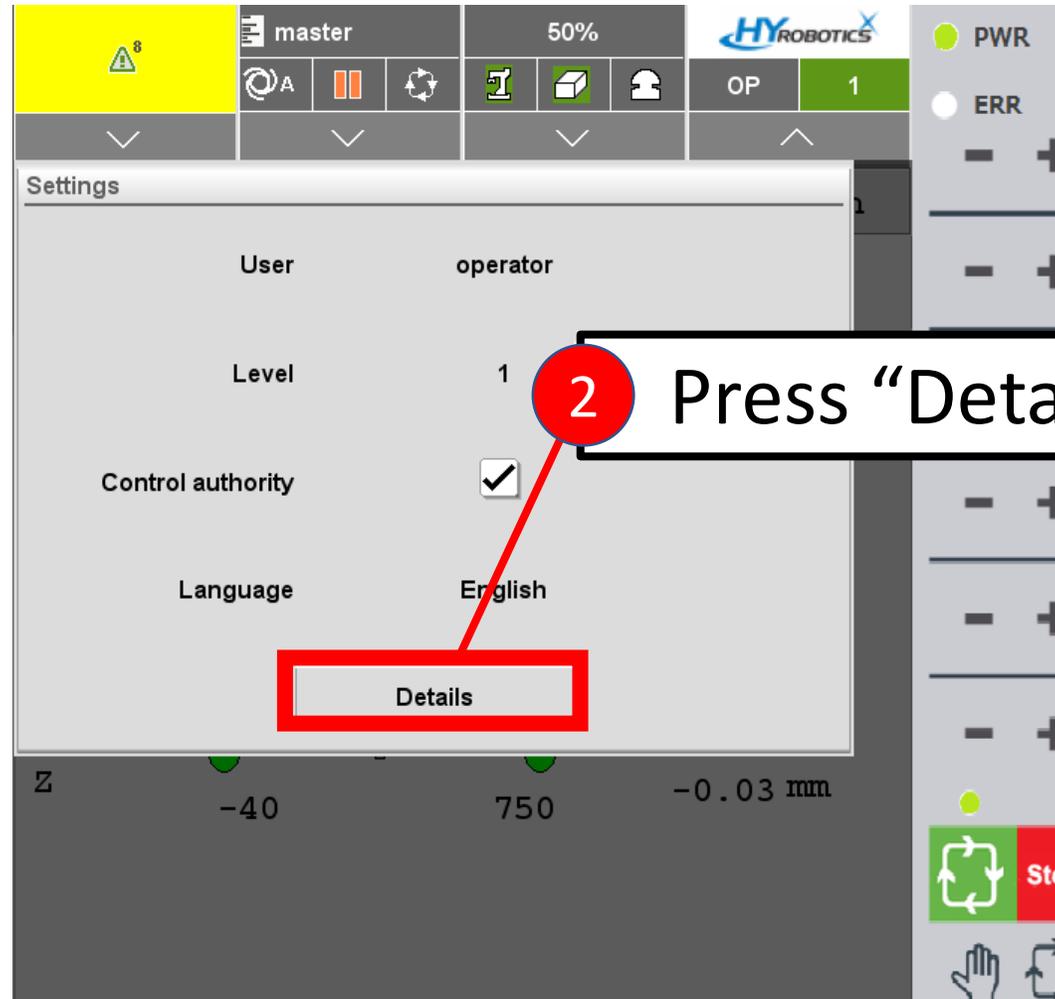

2

Press "Details"

HYROBOTICS

50%

OP 1

System settings

User: operator

Level: 1 Logout

Language: English

Date: Jun 27, 2022

Time: 9:01:48 AM

Displaylock

Robot control authority

Control authority

Device:

Device IP:

Settings Users Version

Menu Mold Speed Timer Signals

1 Select "Administrator"

2 Password is "pass"

Enter password

[Red box around password input field]

1 2 3 4 5 6 7 8 9 0 - = \

q w e r t y u i o p [ ] ←

Ctrl ↓ a s d f g h j k l ; ' . /

Alt ↑ ° z x c v b n m , . /

[Red X icon] [Green checkmark icon]

Control authority

HY ROBOTICS

master 50% ADMIN 16

System settings

User Administrator

Level 16 Logout

Language English

Date Jun 27, 2022

Time 9:04:25 AM

Displaylock Lock

Robot control authority

Control authority

Device: T70IMM (SIM)

Device IP: 192.168.100.102

Settings Users **User-admin.** Version Info Network

Menu Mold Speed Timer Signals

1 Press "User-admin."

The screenshot shows a control panel interface. At the top, there is a status bar with a yellow warning icon, the text 'master', a '50%' indicator, and the 'HYROBOTICS' logo. Below this is a navigation bar with icons for a refresh button, a stop button, a refresh button, a search button, a home button, and a user icon, followed by the text 'ADMIN' and the number '16'. A search bar labeled 'User' is positioned below the navigation bar. A table lists user levels, with the 'Administrator' row highlighted in green. Below the table are three buttons: 'Edit', 'New', and 'Delete'. At the bottom, there is a menu bar with tabs for 'Settings', 'Users', 'User-admin.', 'Version', 'Info', and 'Network'. Below the menu bar are five icons representing different functions: 'Menu', 'Mold', 'Speed', 'Timer', and 'Signals'.

User	Level	Language
Administrator	16	English
operator	1	English
service	15	English
teacher	7	English

1 Select the level you want to change language setting

2 Press "Edit"

HYROBOTICS

master 50% ADMIN 16

User

User	Level	Language
Administrator	16	English
operator	1	English
service	15	English
teacher	7	English

**Edit user**

Name Administrator

Password \*\*\*\*\*

Confirm \*\*\*\*\*

Level 16

Language English

Administrator

Edit New Delete

Settings Users User-admin. Version Info Network

Menu Mold Speed Timer Signals

You can change  
Language & Password

**THANKS**